



EAGLE Manager update guide

ONLY FOR EAGLE2!




EN: Thank you for downloading the EAGLE Manager update.

In order to install, please start your EAGLE and, after Windows boot, exit from the EAGLE Manager software (just pressing the X button on the top right). Then copy the Eagle2Manager.exe file you just downloaded to c:/primalucelab directory of your EAGLE and overwrite the old version. Then reboot your EAGLE to update EAGLE Manager.

ITA: Grazie per aver scaricato l'aggiornamento di EAGLE Manager.

Per installarlo, avviate EAGLE e, dopo l'avvio di Windows, uscite dal software EAGLE Manager (premendo semplicemente il tasto X in alto a destra). Quindi copiate il file Eagle2Manager.exe appena scaricato nella directory c:/primalucelab del vostro EAGLE e sovrascrivete la vecchia versione. Quindi riavviate il vostro EAGLE per aggiornare EAGLE Manager.

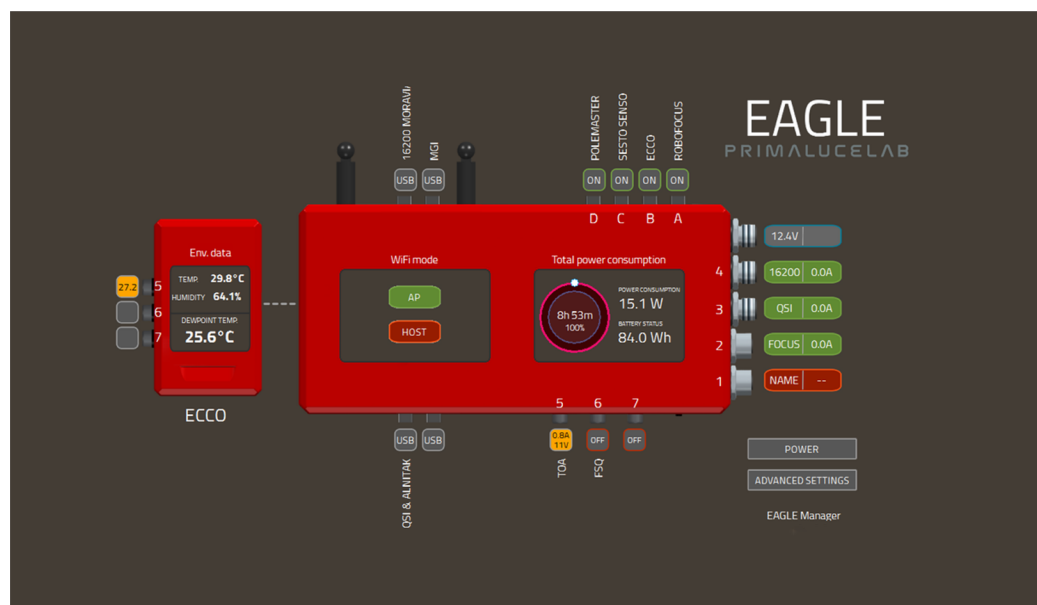

EN: EAGLE Manager 2.8 allows third party astrophotography softwares to take control of the EAGLE's power and USB ports.

IT: EAGLE Manager 2.8 consente a software di terze parti per astrofotografia di controllare le porte USB e di alimentazione di EAGLE.